



Access Easy Extension Enclosure




- ▶ Provides room to house extension boards with more readers and Input / Output points for AEC
- ▶ Every Extension Enclosure communicates via RS-485 with the AEC
- ▶ Every Extension Enclosure requires a AEC Serial Extension board to communicate

Access Easy Extension Enclosure (AEC EXT) provides the space for extending the basic capabilities of the AEC as and when required. In each extension enclosure, there are three available slots for either the AEC 4W EXT boards or the AEC 8I8O EXT boards. For every AEC system configuration, you can extend up to a maximum of 16 Wiegand readers and 32 Input / Output.

The extension enclosure communicates with the AEC via the AEC SER EXT (Serial Extension Board) which is required in every extension enclosure. All the rest of the extension boards are interconnected via the IDE bus port.

There are couple of ways to configure the AEC with the Access Easy Extension depending on your security system requirement. Refer to the Product Ordering Guide which will help you determine how the system should be configured.

System Overview

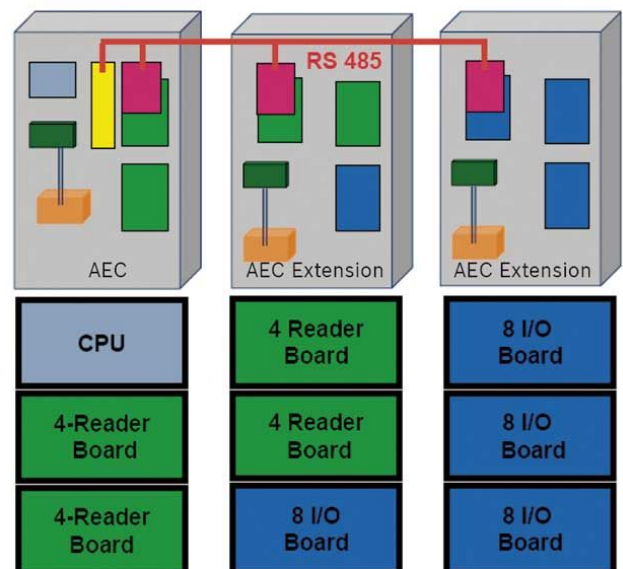

16 Readers, 32 I/O System
(1x AEC and 2x AEC Extension Enclosure)

Parts Included

Quant.	Component
1	AC to DC Power Supply or AC/AC Transformer
1	DC/DC Converter Board or AC to DC Power Supply Board
1	Panel Enclosure

Technical Specifications

Dimensions

Enclosure (H xW xD)	530 x 460 x 100 mm (17.9 x 20.7x3.9 inch)
---------------------	--

Environmental

Relative Humidity	10% to 95% at 32 °C (+90 °F)
Temperature (Operating)	0 °C to +50 °C (32 °F to 120 °F)
Temperature (Storage)	0 °C to +55 °C (32 °F to 130 °F)

Extensions

Slots	3 Extension boards
-------	--------------------

Power Requirements

Primary Voltage Input (AC)	110 VAC +10/-15% (50/60 Hz) 230 VAC +10/-15% (50/60 Hz)
Secondary Voltage Input	+5 VDC and 12 VDC for CPU board +15 VDC ±1%, 7 Ah for all other boards
Backup Battery (Optional Backup Battery: Not included in standard package)	12 V DC, 7 Ah rechargeable battery

Ordering Information

AEC Extension Enclosure CE with Power Supply - Charger board, AC/DC Transformer (CE), (APR, EMEA)	AEC-EXT-USP1
AEC Extension Enclosure UL with Power Supply - Charger board, AC/DC Transformer (UL), (AMERICAS)	AEC-EXT-USP2
Extension Board 4 Wiegand Access Easy Extension - 4 Wiegand Interfaces and Door controls (8 IN/OUT), Fitting parts.	AEC-4W-EXT
Extension 8 Input and 8 Output Access Easy Extension - 8 Input 8 Output Board, Fitting parts.	AEC-8I8O-EXT
AEC Extension RS 485 to extension board Access Easy Extension conversion serial RS-485 to Reader or IO board. (1 for each extension enclosure) (AMERICAS, APR, EMEA)	AEC-SER-EXT

Europe, Middle East, Africa:
Bosch Security Systems B.V.
P.O. Box 80002
5600 JB Eindhoven, The Netherlands
Phone: +31 40 27 83955
Fax: +31 40 27 86668
emea.securitysystems@bosch.com
www.boschsecurity.com

Americas:
Bosch Security Systems
130 Perinton Parkway
Fairport, New York, 14450, USA
Phone: +1 800 289 0096
Fax: +1 585 223 9180
security.sales@us.bosch.com
www.boschsecurity.us

Asia-Pacific:
Bosch Security Systems Pte Ltd
38C Jalan Pemimpin
Singapore 577180
Phone: +65 6319 3450
Fax: +65 6319 3499
apr.securitysystems@bosch.com
www.boschsecurity.com

Represented by